

FAQS

Q. The mains Airflo is only making a "putting" sound?

A. When in "Auto" mode but not connected to any equipment, one or two "putt" noises is perfectly normal. If the equipment is connected and more "putt" noises are heard, there is either a leak in the equipment or in the Airflo system itself.

Q. My compressor will not deflate my equipment?

A. Check the airline is not trapped and the airhose is connected to the compressor securely. If that does not cure the problem, and it is a battery Airflo, press the battery charge "?" button. What lights come on? If red - it needs charging immediately and that is why it will not deflate. The compressor has an automated system whereby if there is not enough charge to lower and raise the equipment it will not lower you in the first instance. If the yellow light comes on - recharge soon.

Q. How do I know how much charge is in the battery?

A. Press the "?" button and follow the procedure outlined in the previous answer.

Q. Can I use an existing Mangar International Product with the Airflo compressor?

A. Yes, but first you will need to order an Airflo Adaptor.